

Dear Customer:

IMPORTANT INSTRUCTION SHEET

This information is so important we have not only included it in our enclosed instruction booklet but we are repeating it here. These instructions must be followed each and every time you move your machine.

1. **BEFORE** you begin to play - Push Lever "10A" up. This action will move the Pay Off Actuator (10) from a downward sloping position to an upward sloping position. See Photo #1 below.
2. **BEFORE** filling your machine - Be sure Dump Lever (14) is closed by moving Dump Lever (14) to the right. Photo #2 below shows closed position - proper for playing.
3. Be sure the Supply Tray (9) on the back of your machine always has balls in it. A minimum of 300 balls is recommended for the smoothest operation of your machine. If the Supply Tray (9) runs dry your machine will not pay off when you get a jackpot and the jackpot balls will jam in the back. The first time your machine does not pay off when you hit a jackpot - put more balls in Supply Tray (9) and the unpaid jackpot will automatically pay off. But if you wait and jackpot balls begin to collect on the back of the machine they will jam in the back.

Photo #1


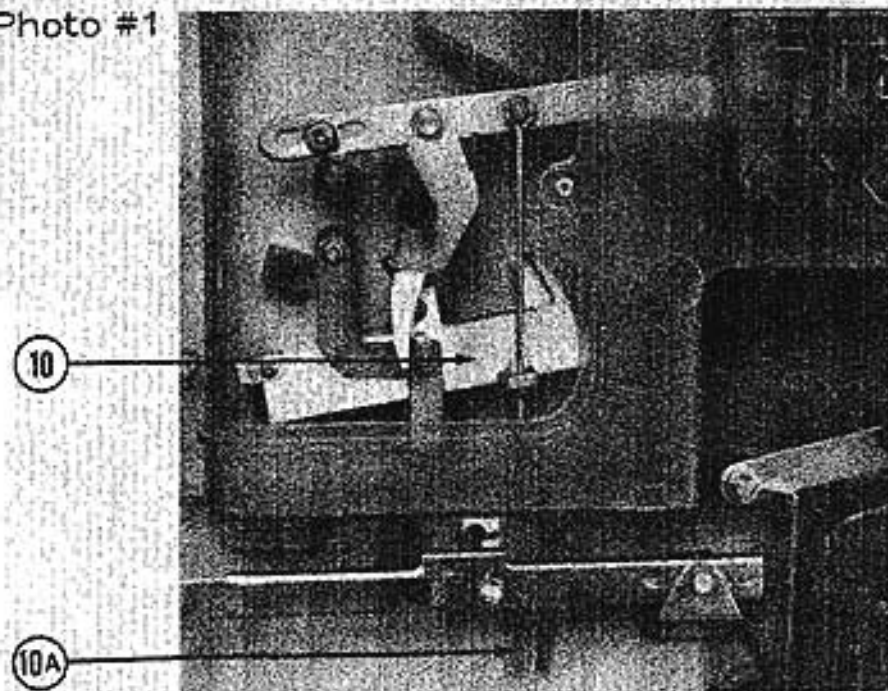


Photo #2

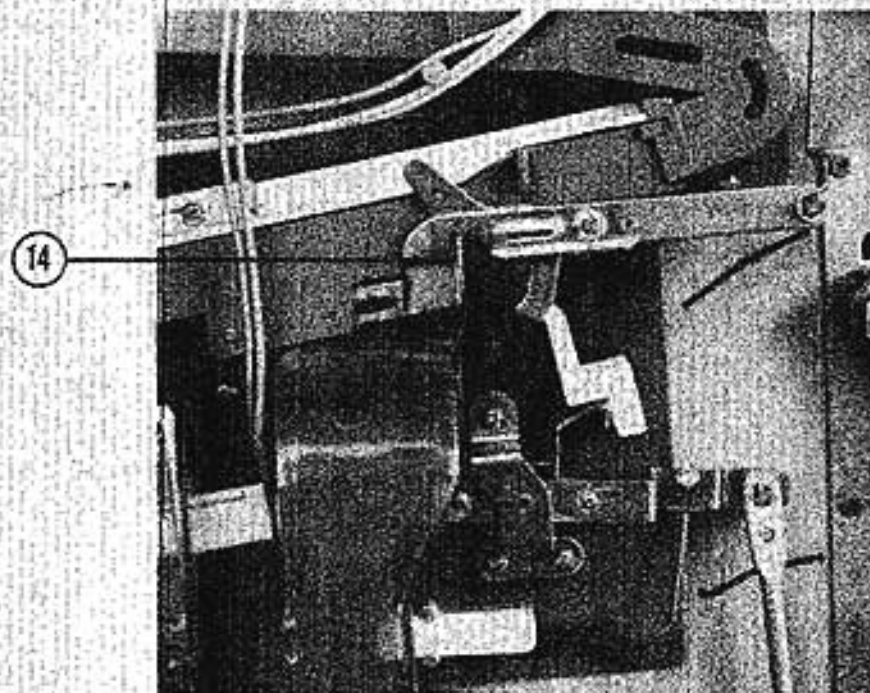

CAREFULLY READ ALL OF THE INSTRUCTIONS PROVIDED BEFORE BEGINNING TO PLAY PACHINKO

ANSWERS TO YOUR QUESTIONS

- KEYS** No keys are available for your PACHINKO machine in order to preserve the security of the machines in use in the parlors in Japan. If you plan to build your machine into a wall or cabinet, a local locksmith can change the lock for you for a nominal fee.
- POWER SOURCE** We repeat our previous statement - NO POWER SOURCE IS NEEDED TO OPERATE YOUR PACHINKO MACHINE. A schematic of the electrical system of the machine is not available.
- Battery packs are NOT included with your machine, but are available - see accessory order form. It will work only the jackpot light which flashes on when you hit a jackpot.
- REPAIR SERVICE** Only one repair station is available in the United States - our factory in El Segundo, California. Southern California residents may call our office - (213) 650-0562 - for a repair appointment if repairs are necessary. Out of state customers should write to us in detail their problems using the instruction booklet to mark trouble spots. A new booklet will be returned to you with the parts required to repair your machine and with instructions on how to fix the machine.
- FACE PLATE** The face plate is not cracked or scratched, merely there are TWO protective sheets of film covering both the front and back side of the face plate during shipping. If you remove the film you will see that the face plate is perfectly clear.
- PACHINKO BALLS** A minimum of 300 PACHINKO balls is recommended in order to derive the most pleasure from your PACHINKO machine.